



757-842-6497
WWW.JLOSC.COM

**J&L Oil Separator 3.0 Passenger Side (2005-10 Mustang GT)
 #3013P**

Installation Instructions

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator, (1) J&L mounting bracket, (2) fine thread machine screws, (2) 3/8 hoses, (2) quick connections
2	Gather all of the following tools needed for the installation: Phillips screwdriver, 8mm or 5/16 socket/ratchet
3	Remove stock PCV line
4	<p>Using the fine thread screws provided attach the J&L mounting bracket to the top of the Separator. Remove the ground bolt and use it to attach the J&L Separator and J&L bracket to the shock tower. IMPORTANT! Ground strap must go on TOP of J&L bracket to still make the ground.</p>  <p>Using the short 3/8 hose, insert the 90° quick connect fitting and to go from the valve cover to the "C" side fitting on the Separator and the long 3/8 hose to go from the front most fitting "O" to the intake tube. Depending on the brand/style cold air intake you have this hose may need to be trimmed for best fit. If you have the stock intake, use the supplied straight quick connect fitting in the longer hose.</p>



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.