

## 757-842-6497 WWW.JLOSC.COM

## J&L 3.0 Oil Separator, Driver Side (1999-2004 Ford Lightning; 2002-03 F150 Harley Davidson) #3027D Installation Instructions

Please review complete instructions prior to installing.

Verify you have all of the following parts included in the kit: (1) J&L Oil Separator, (1) J&L Angled in bracket, (2) Fine thread machine screws, (2) Course mounting screws, (2) 1/2 hose kits  Gather all of the following tools needed for the installation: Drill with small drill bit, Phillips screwdrilight oil.  Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel direct brake booster. It must be mounted low enough so it doesn't come in contact with the hood and in where you can still unscrew the can and remove it.  Here is where we recommend:  Here is where we recommend:  Here is where we recommend:  Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting s attach the mount.	tep#	
Gather all of the following tools needed for the installation: Drill with small drill bit, Phillips screwdri light oil.  Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel direct brake booster. It must be mounted low enough so it doesn't come in contact with the hood and in where you can still unscrew the can and remove it.  Here is where we recommend:  Here is where we recommend:  Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting s attach the mount.  Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET.		<b>Verify you have all of the following parts included in the kit:</b> (1) J&L Oil Separator, (1) J&L Angled mounting bracket, (2) Fine thread machine screws, (2) Course mounting screws, (2) 1/2 hose kits
Ilight oil.  Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel direct brake booster. It must be mounted low enough so it doesn't come in contact with the hood and in where you can still unscrew the can and remove it.  Here is where we recommend:  Here is where we recommend:  Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting s attach the mount.  Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET.		
Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel direct brake booster. It must be mounted low enough so it doesn't come in contact with the hood and is where you can still unscrew the can and remove it.  Here is where we recommend:  Here is where we recommend:  Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting sattach the mount.  Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET.		
Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel direct brake booster. It must be mounted low enough so it doesn't come in contact with the hood and in where you can still unscrew the can and remove it.  Here is where we recommend:  Here is where we recommend:  Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting stattach the mount.  Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET.	,	light oil.
Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting s attach the mount.  Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET.		Choose a mounting location for the Separator. We recommend mounting it on the plastic cowl panel directly above the brake booster. It must be mounted low enough so it doesn't come in contact with the hood and in a location where you can still unscrew the can and remove it.
attach the mount.  Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET.  5	3	
Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Separator to the Mount the Separator to the mounting bracket. Mount the Separator to the mounting bracket.  5		Hold the J&L bracket in position and mark the holes to be drilled. Drill 2 holes smaller than the mounting screws and
Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Sepa J&L LOGO IS LINED UP WITH THE J&L ON THE BRACKET. 5	.	attach the mount.
5	<b>,</b>	Use the 2 supplied fine thread screws to attach the Oil Separator to the mounting bracket. Mount the Separator so the
	.	J&L LOGO 15 LINED UP WITH THE J&L ON THE BRACKET.
		Pull the hard plastic PCV hose out of the rubber 90* on the valve cover and rotate the 90* fitting straight up.

Page 1 of 2 11-08-22

Use the supplied pre-built 1/2 hoses to connect the fitting on the valve cover (**use light oil in hose to aide in sliding over fitting**) to the fitting on the Separator and then from the Separator to the hard plastic factory line as shown below.



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail <u>info@JLosc.com</u> or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. <a href="www.JLosc.com/warranty">www.JLosc.com/warranty</a>

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit <a href="www.JLosc.com">www.JLosc.com</a> for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.

Page 2 of 2 11-08-22