





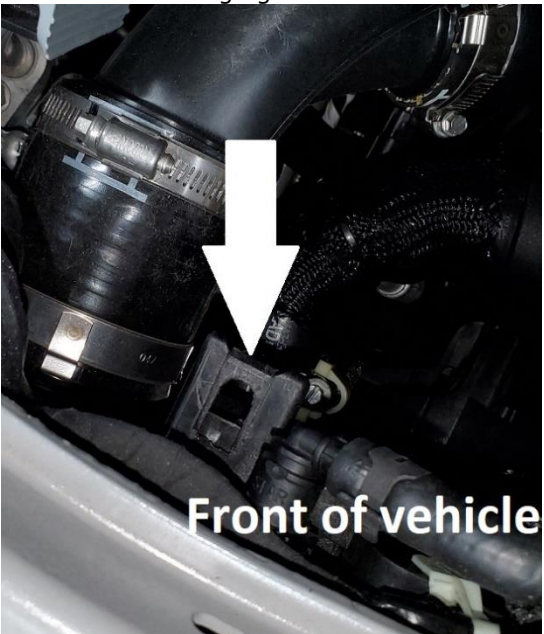

**757-842-6497**  
**WWW.JLOSC.COM**

**J&L 3.0 Oil Separator (2020-2025 Explorer 3.0 EB; 2020-2025 Lincoln Aviator 3.0 EB Passenger Side) #3052P**

**Installation Instructions**

**Check out our full install video available on our website on this product page!**

**Please review complete instructions prior to installing.**

Step#	
<b>1</b>	<b>Verify you have all of the following parts included in the kit:</b> (1) J&L Oil Separator, (1) J&L Mounting bracket, (2) Fine thread machine screws, (1) Threaded J-Clip, (1) Bolt
<b>2</b>	<b>Gather all of the following tools needed for the installation:</b> 10mm Socket, ratchet and extension, Phillips screwdriver
<b>3</b>	<p>Remove factory PCV line by pulling tabs and pulling it off the engine. Remove the PCV valve connection first and rotate hose upward to get access to tab on intake manifold.</p> <div style="display: flex; justify-content: space-around;">   </div>
<b>4</b>	<p>Locate tab below, this is on the passenger side of the radiator support. Push threaded J clip over hole, it will snap into place. The threaded portion should be on the underside of this tab. Install bracket and bolt into threaded portion. Slightly rotate bracket towards driver side of vehicle. Pay close attention that the bracket isn't sitting against the small coolant hose.</p> <div style="display: flex; justify-content: space-around;">   </div> <p style="text-align: center; margin-top: 10px;"><b>Front of vehicle</b></p>

To put can into position, route hose that is angled down under the air intake tube. Route the hose pointed up over the intake tube. Mount can to the bracket with supplied mounting screws.

The connection going under the tube will go to the intake manifold. The connection going over the tube will go to the PCV Valve. Rotate fittings in hose as needed for optimum layout.

**If you ever need to remove the fittings from the vehicle, press the large grey tab inward to release fitting. Do not remove the grey clips completely.**

5



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail [info@JLosc.com](mailto:info@JLosc.com) or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

**J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life!** Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. [www.JLosc.com/warranty](http://www.JLosc.com/warranty)

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

**Return Policy:** All returns will be subject to a 10%-25% restocking fee. Please visit [www.JLosc.com](http://www.JLosc.com) for complete return policy.

**Disclaimer:** J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.