

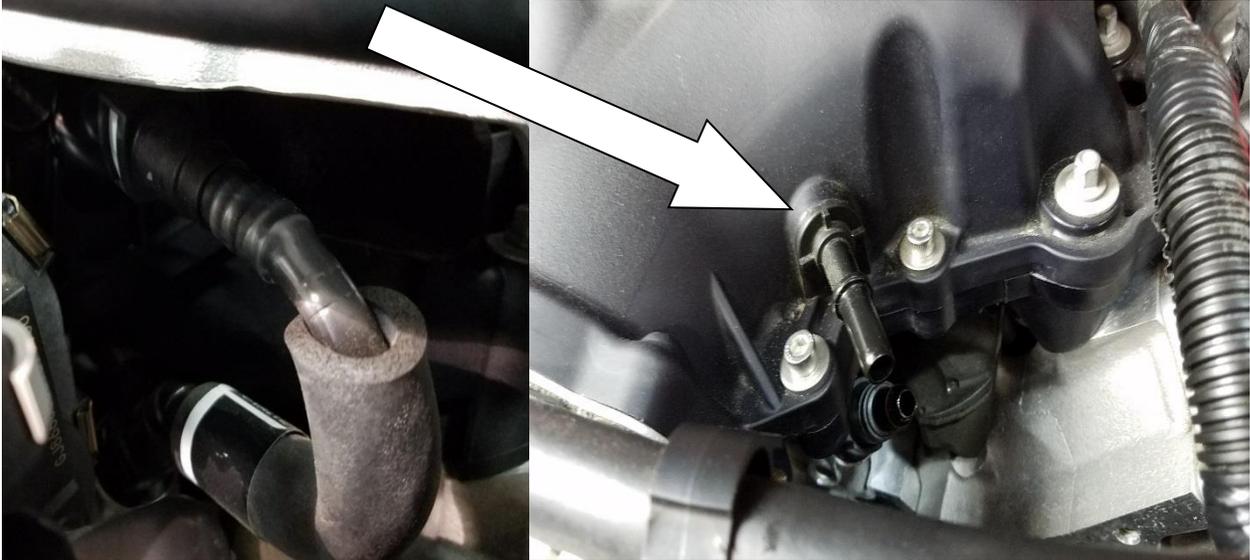


757-842-6497
WWW.JLOSC.COM

Installation Instructions
J&L 3.0 Oil Separator (2016-2024 Camaro LT1 6.2L, Driver Side)
#3081D

Install video available on our website www.JLosc.com
Search: 3081D and click videos

Please review complete instructions prior to installing.

Step#	
1	Verify you have all of the following parts included in the kit: (1) J&L Oil Separator w/fittings and hoses, (1) J&L Mounting bracket, (2) M4 screws
2	Gather all of the following tools needed for the installation: 15mm socket and ratchet, Phillips screwdriver, and light oil for ease of install of hoses
3	Remove the factory PCV hose from PCV valve to manifold, this line is found near the driver side of the throttle body. Depress the white buttons on these lines to release. - 
4	Remove strut bar if equipped. Remove 15mm bolt from the driver side brace to the firewall. Install J&L bracket and reinstall the bolt. 

5	Use the supplied screws and attach J&L Separator to the bracket as shown below.
6	Install the hose on the "O" side to the PCV Valve on lower manifold. Install the other hose (C Side) to the intake manifold. Reinstall strut bar if you have one. Done!



To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday, 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.