




757-842-6497
WWW.JLOSC.COM

J&L 3.0 Oil Separator Passenger Side #3120P
(2019-2024 Nissan Altima 2.5L)

To view install video: go to our website www.JLosc.com and type 3120P in search box. Click on product, scroll down and click on videos.

Installation Instructions

Please review complete instructions prior to installing.
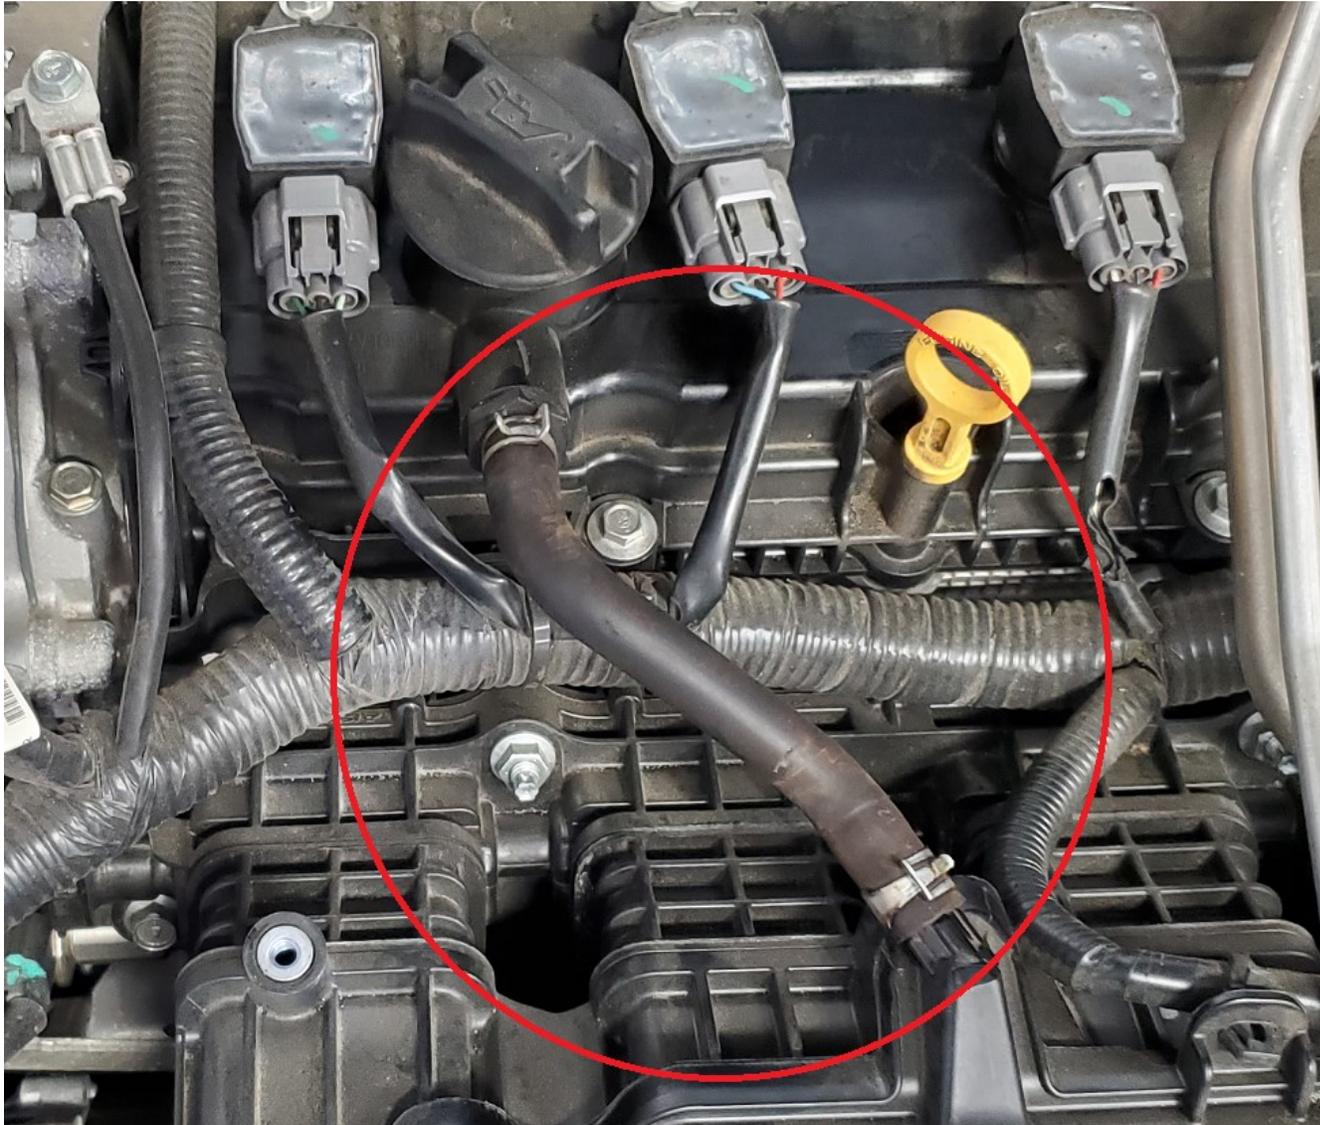
| Step # | |
|--------|--|
| 1 | Verify you have all of the following parts included in the kit: (1) J&L Oil Separator, (1) J&L Mounting bracket, (2) M4 Fine thread screws, (1) M6 Bolt |
| 2 | Gather the following tools needed for the installation: Phillips screwdriver, 10mm socket, ratchet, Standard pliers |
| 3 | <p>Locate factory PCV line connecting from the valve cover to the intake manifold.</p> <p>Slide back clamps with pliers, you may need to twist the line with pliers to break the seal and pull off the line.</p>  |

- 4 Mount the J&L bracket to the J&L oil separator with supplied screws, mount bracket so the logos on the bracket and oil separator face the same direction.

Remove both stock hose clamps from factory line and slide them onto the J&L lines.




5 Using the supplied 10mm bolt, mount J&L assembly to intake manifold threaded boss. Just hand tighten the bolt to start.

Connect the short hose to PCV valve on valve cover, slide clamp into place to secure the line.

Connect the longer hose to intake manifold, slide clamp into place to secure the line.

Once hoses are connected, check the clearance of oil separator between the intake manifold and wiring harness. Make sure there's a gap between both and tighten 10mm bolt.

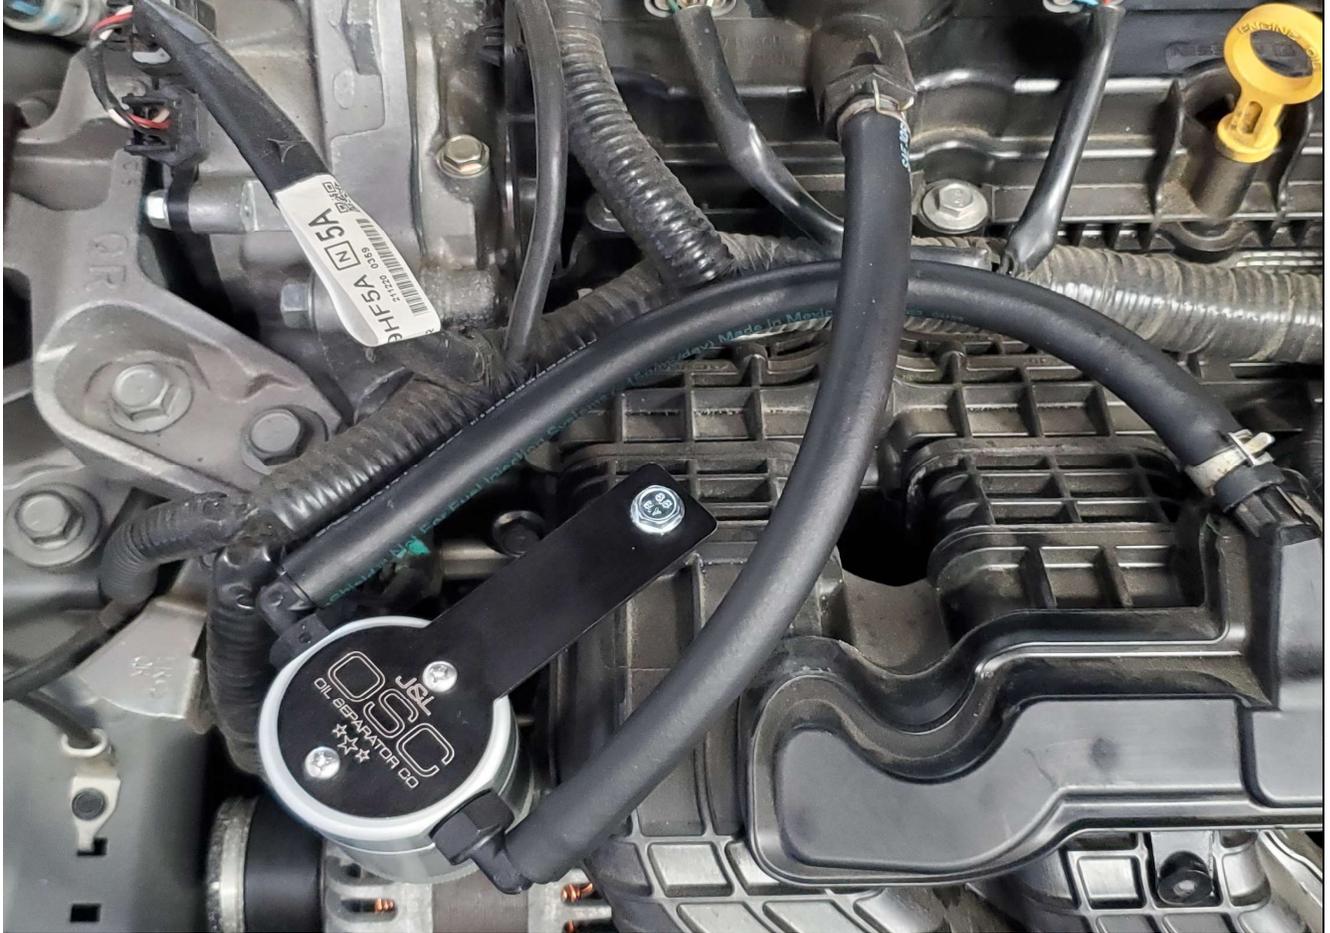

6 Check your oil separator after 1000 miles of driving to gauge how often you will need to service it. Average collection is roughly 1 ounce per 1000 miles, the oil separator holds 3oz of fluid.

To properly clean the filter in the Oil Separator, spray any degreaser or solvent through it and let it air dry. Clean it every 10,000 miles.

Thank you for your business. If you have any questions, please e-mail info@JLosc.com or call 757-842-6497. Our hours are Monday-Friday. 8:00am – 4:30pm Eastern Time.

J&L Oil Separator co. Lifetime Satisfaction Guarantee. We want you to be a J&L customer for life! Your new J&L product is warranted to be free from defects in materials and workmanship for the life of the *original retail purchaser*, subject to the limitations contained in our warranty found here. www.JLosc.com/warranty

We guarantee workmanship and even a pathway to discounted upgrades for substantially improved items.

Return Policy: All returns will be subject to a 10%-25% restocking fee. Please visit www.JLosc.com for complete return policy.

Disclaimer: J&L Oil Separator co. makes no warranties whatsoever, expressed, or implied, oral or written to any purchasers, except the warranty above. J&L Oil Separator co. hereby specifically excludes from any implied warranty of merchantability or implied warranty of incidental, secondary, or consequential damages of any kind whatsoever. All purchasers and users of products manufactured by J&L Oil Separator co. agree to hold harmless and indemnify J&L Oil Separator co. from any and all claims arising from their use. Failure to receive notice of any or the limitations contained in this disclaimer shall not serve to extend liability to J&L Oil Separator co. for any claims arising out of use of its products.